

trp

TRP R-Switch 2.0 Installation Instructions

Table of Contents

h

st

k

2009 to 2016 Installation Instructions: Pages 3 - 8

.....

2017+ Installation Instructions: Pages 9 - 15

■
■
■
■
■
■
■
■

Common Mistakes: Pages 16-17

[illegible]

Start of 2009 - 2016 Installation Instructions


1. Start by removing both side trim pieces for the center dash.




2. Remove all 4 screws holding the R-Switch panel and the A/C controls




3. Lift up on the A/C switch panel and then remove the R-Switches by pulling towards you. The R-Switch panel has a ridge that sits under the A/C panel. Unplug the connector and remove it from the vehicle.

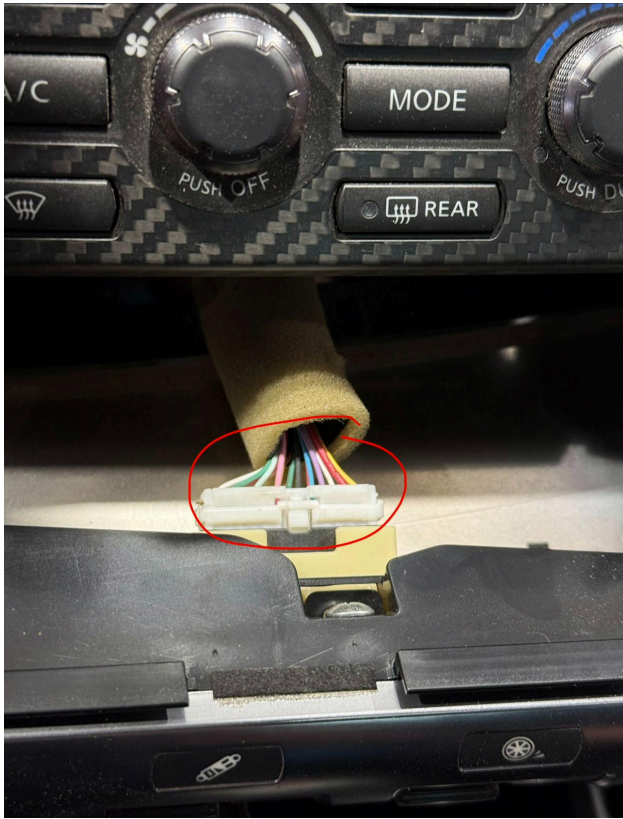


4. Remove the 3 screws on the back of the R-Switch panel to remove the black cover.

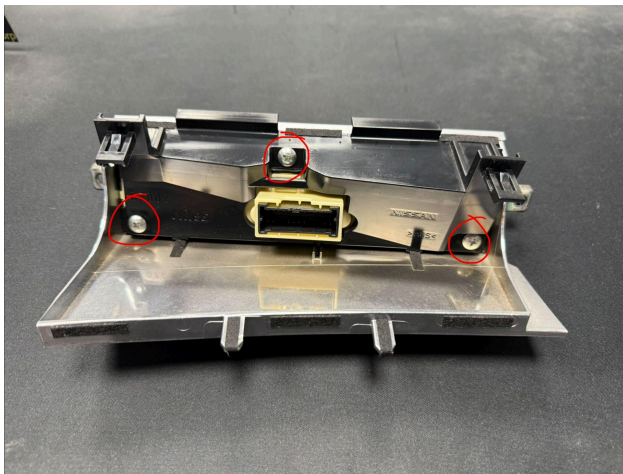

5. Remove the R-Switch by separating the plastic from the retainer on the side.

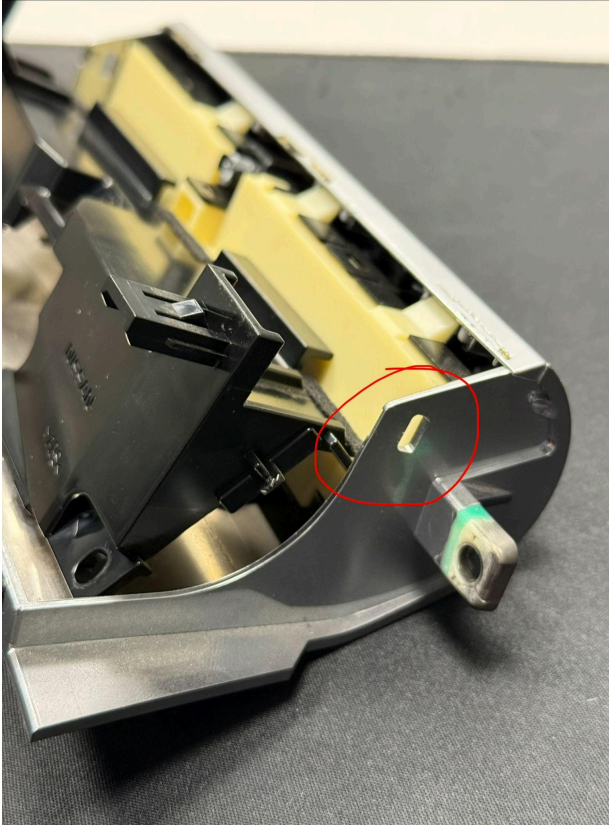



6. Once removed you will need to separate the housing by separating the plastic from more retaining clips. Start from one end and work your way to the other side.

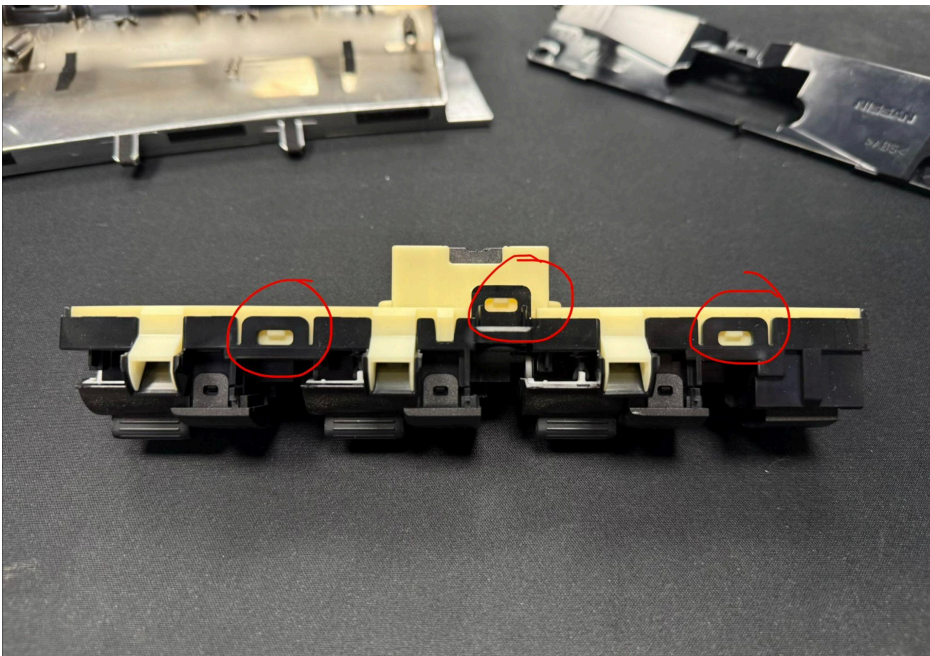

7. Before proceeding further, you will need to attach your ESD strap to a ground. This will prevent any damage to the board. Common grounded surfaces are a desktop PC chassis or the bottom pin of a US electrical household outlet. Put the wrist strap on your wrist to protect the sensitive electronic components from electrostatic discharge during installation.



8. Replace the OEM board with the supplied TRP board.

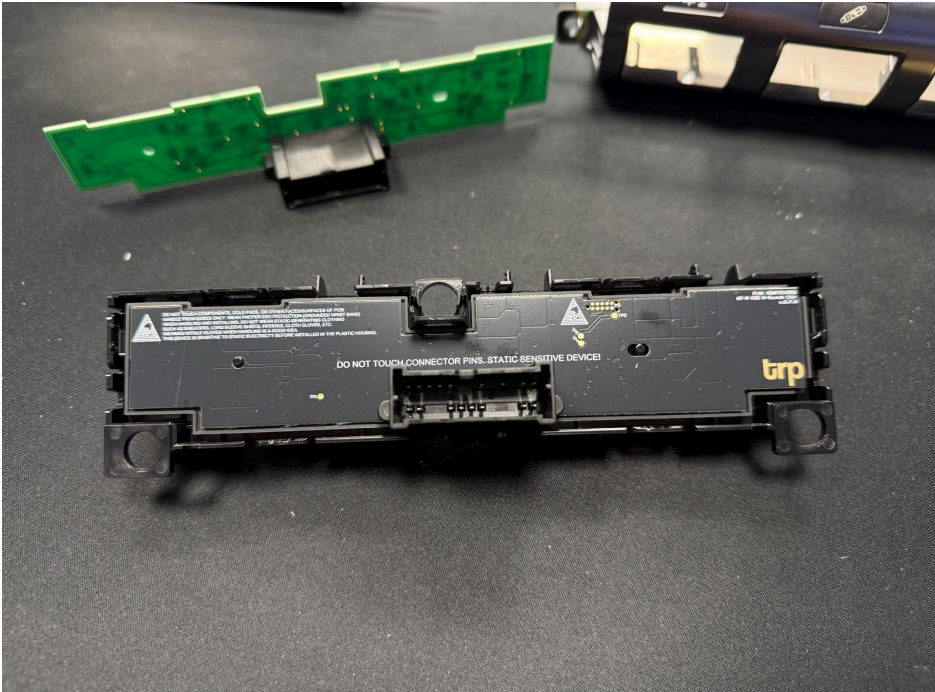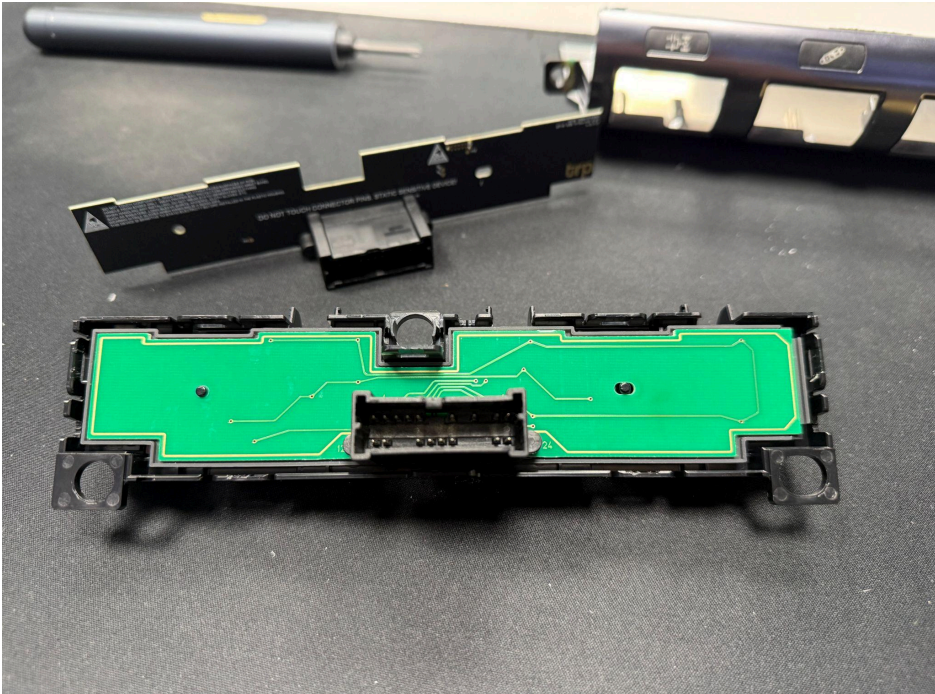

9. Simply reinstall in the reverse order.

End of 2009 - 2016 Installation Instructions

Start of 2017+ Installation Instructions

1. Start by removing the carbon center console trim by lifting up on the rear of the panel. You will want to pull up on the e-brake and open the center console to gain additional clearance.




2. The center carbon trim is a separate piece from the shifter. Make sure to unplug the control knob when removing it.




3. To remove the shifter bezel and R-Switch you will want to key on and put the shifter into neutral. Once you do that you can simply lift up and pull the bezel towards you. There are 3 connectors that you will need to disconnect.



4. Remove the 3 screws on the back of the R-Switch panel to remove the black cover.

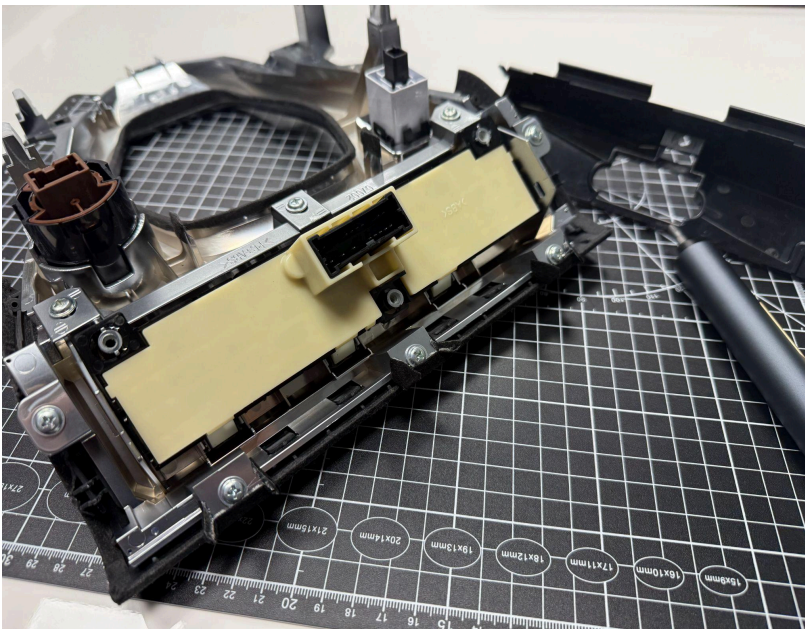



5. Once removed you will need to separate the housing by separating the plastic from more retaining clips. Start from one end and work your way to the other side.

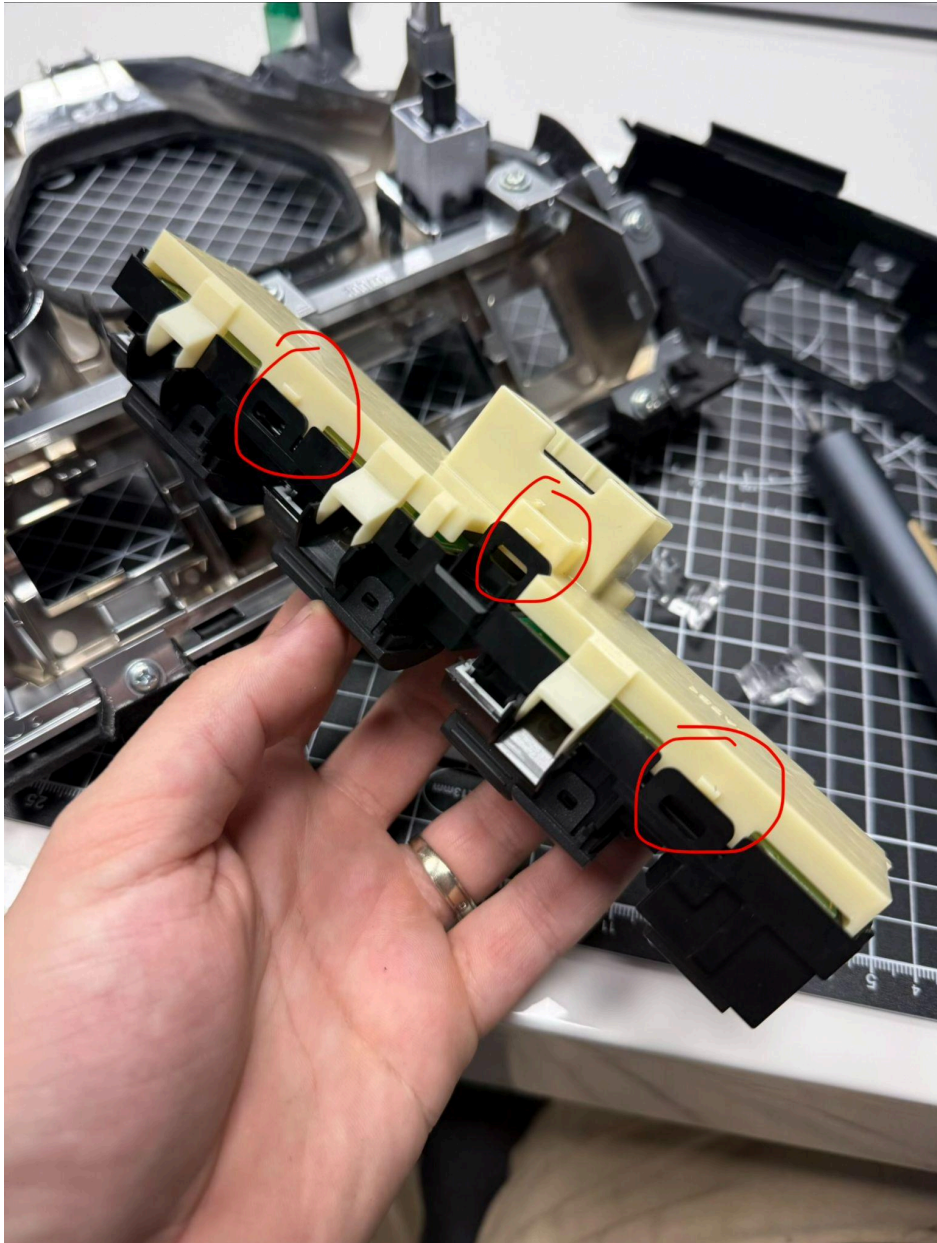

6. Before proceeding further, you will need to attach your ESD strap to a ground. This will prevent any damage to the board. Common grounded surfaces are a desktop PC chassis or the bottom pin of a US electrical household outlet. Put the wrist strap on your wrist to protect the sensitive electronic components from electrostatic discharge during installation.



7. Replace the OEM board with the supplied TRP board.

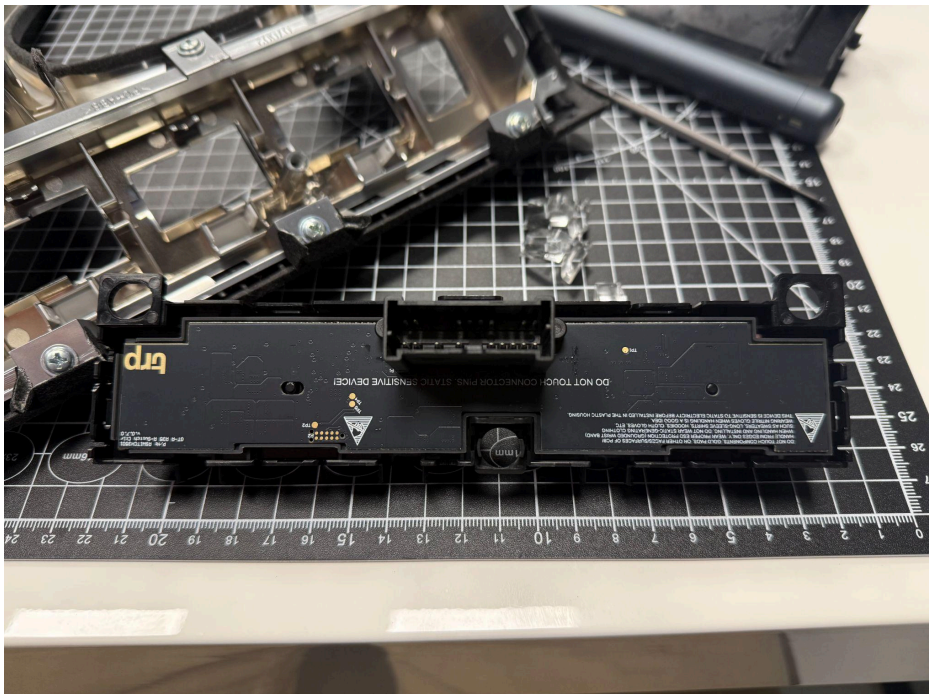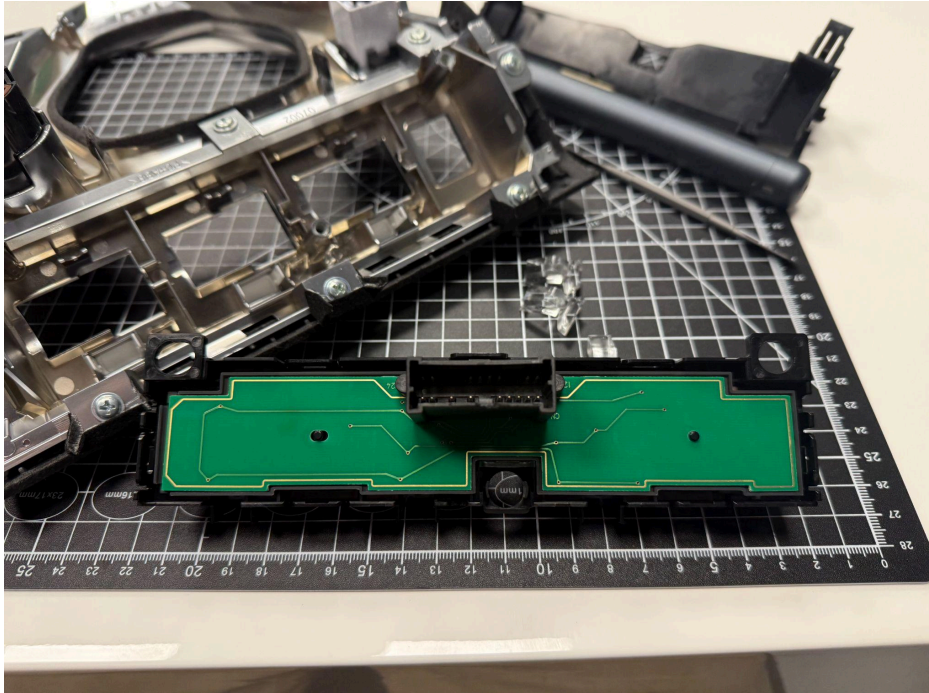


8. Simply reinstall in the reverse order.

End of 2017+ Installation Instructions

Common Mistakes

- A. Lack of function of the R-Switch buttons is one of two common issues.
 - 1. Make sure the casing is fully clicked together on every attachment point. There should be 8 attached points.

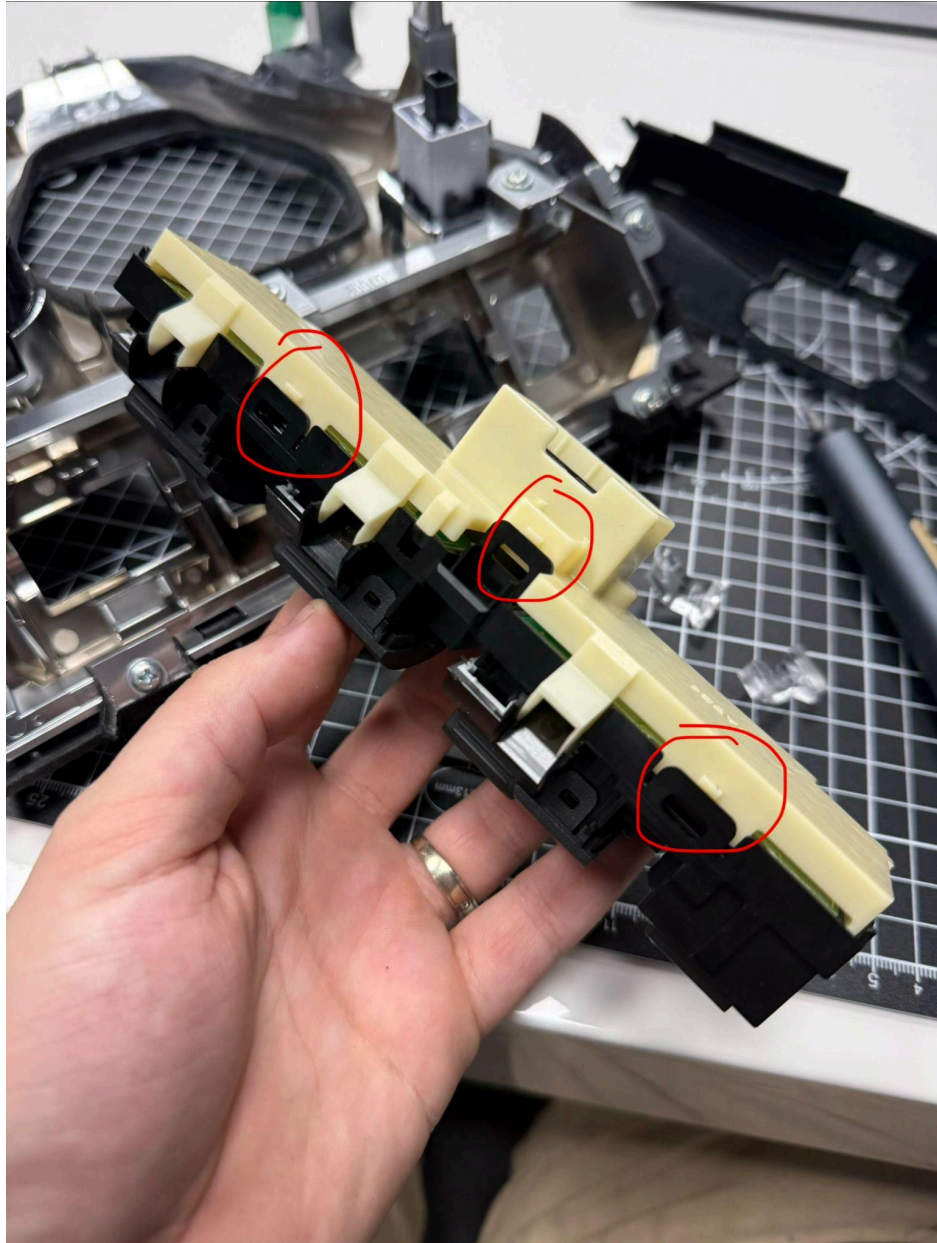

2. Make sure none of the white rocker knobs fell out when you disassembled the unit. These sit behind the silicone gasket and are what actuates and makes the connection on the board when you toggle the R-Switch.

